




Operating manual

Recording device Eyepatch
single unit variant
B-EYE-01-EU
„KB-Serie“

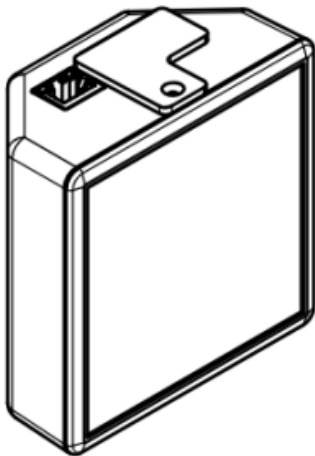

BAUTA GmbH
Werner-von-Siemens-
Straße 2-6
Building 5111
76646 Bruchsal

Mail:
info@bauta.io
Web:
www.bauta.io

Language: EN
Ident-Nb: B-EYE
Version: 1.1
Date: 22.07.2026

1	Product and manufacturer	3
1.1	Product	3
1.2	Manufacturer	3
2	About this operating manual	3
2.1	Purpose	3
2.2	Availability	3
2.3	Warnings	4
2.3.1	Signal words and signal colours	4
2.3.2	Structure	4
2.4	Symbols	4
2.4.1	Warning signs	5
2.4.2	Mandatory signs or symbols	5
3	Description of the device	6
3.1	General description	6
3.2	Functional description	6
3.3	Scope of delivery	7
3.4	Views	8
3.4.1	Top view and views from the rear at an angle	8
3.4.2	View from the left, from the right and view from the rear	8
3.4.3	Front view	9
3.5	Usage and operating models	9
3.5.1	Usage mode	9
3.5.2	Operating modes	9
3.5.3	Description of operating modes	10
3.6	Display and control elements	10
3.7	Available interfaces	10
3.8	Type plate	12
4	Technical Specifications	12
4.1	Operational Loads	12
4.2	Dimensions	12
4.3	Product mass	13
4.4	Power supply	13
4.5	Environmental conditions	13
4.5.1	Operation	13
4.5.2	Transport	13
4.5.3	Storage	13
5	Safety	14
5.1	Intended use	14
5.2	Scope of application	14
5.3	Roles and qualification of personnel	14
5.4	Cyber security	14
5.5	Warnings	15
6	Installation	15
6.1	Required external accessories	15
6.2	Safety instructions	15
6.3	Carrying out the installation	17
7	Commissioning, operation and downtime	19
7.1	Commissioning	19
7.2	Operation	19
7.3	Downtime	19
8	Maintenance / Servicing / Repairs	20
8.1	Service address	20
9	Cleaning	20
10	Disposal	21
11	EU Declaration of Conformity (CE)	21
12	Appendix / Notes	23

1 Product and Manufacturer

1.1 Product

This user manual describes the following product.

Single-unit version (Version B) of the device for hardware-based encryption of sensor data.

Type: B-EYE-01-EU

1.2 Manufacturer

Name and address	BAUTA GmbH Werner-von-Siemens-Str, 2-6 76646 Bruchsal 
Mail	info@bauta.io
Web	www.bauta.io

2. About this operating manual

To ensure the correct and safe use of this low-voltage appliance, please follow the instructions and recommendations set out in this operating manual.

Please keep this operating manual for future reference until the appliance has been disposed of.

2.1 Purpose

This operating manual contains information on the safe, trouble-free and economical use of the device. This information is intended for persons who install, commission or use the device.

The following table provides an overview of the persons involved and their tasks.

Person	Task
Operator	Operating the device or starting or stopping continuous recording ('scrambled' images). Transferring and viewing the data / processed data on an external device / computer system / server.
Maintenance Technician (BAUTA-certified specialist)	Maintenance of the equipment.
Installer and user of the equipment	Installation and commissioning of the unit.

2.2 Availability

The operator shall make these operating manuals, or extracts thereof, available to users of the equipment.

The operator shall keep this operating manual, or extracts thereof, readily accessible in the immediate vicinity of the equipment.

2.3 Warning notices

This operating manual contains warning notices that alert users to residual hazards.

The classification of the warnings is based on the severity of the harm that may result from disregarding the warnings or failing to follow the recommended actions.

2.3.1 Signal words and signal colours

Warnings may be introduced by one of the following signal words and marked with a corresponding signal colour.

Signal word	Meaning	Signal colour
WARNING	Consequences of non-compliance: Death or very serious injury may result.	 WARNING
CAUTION	Consequences of non-compliance: Serious or minor injuries may result.	 CAUTION
NOTICE	Consequences of non-compliance: Possible damage to property or the environment.	NOTICE

2.3.2 Structure

The warnings can be presented in accordance with the SAFE method:

S	Signal words used (CAUTION or NOTE)
A	Nature and source of the hazard Description of the hazard and its cause
F	Consequence Description of the potential consequences for humans, animals and the environment that may arise from the hazard
E	Escape Recommendations on how to avoid danger

2.4 Symbols

The following symbols are used in this operating manual.

2.4.1 Warning signs

A warning sign is a safety sign that warns of a risk or hazard.

The table below provides an overview of the warning signs used and their meanings.

Symbol	Meaning	Symbol	Meaning
	General warning sign		Warning: Risk of falling
	Warning: Risk of slipping		

2.4.2 Mandatory signs or symbols

A mandatory sign is a safety sign that prescribes a specific course of action.

The table below provides an overview of the mandatory signs or symbols used and their meanings.

Symbol	Meaning	Symbol	Meaning
	Follow the instructions		Wear foot protection
	Wear eye protection		Unplug the power lead
	The printed operating manual must always be available on site!		

3 Description of the device

This section contains information to help you understand the device.

3.1 General description

The basic structure and design of the device are outlined below.

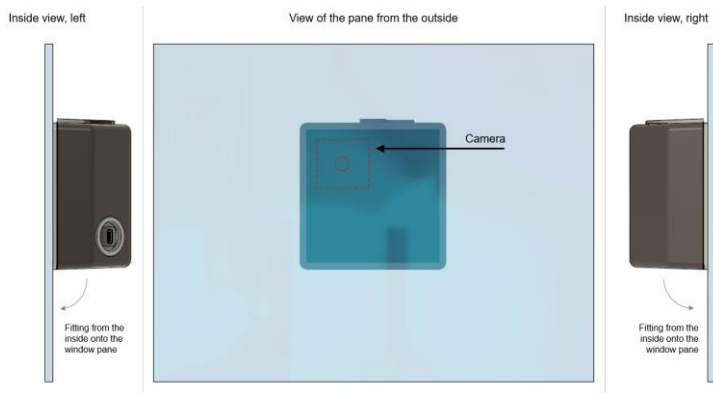


Figure: Views of the device after it has been mounted by sticking it to the glass pane

- The housing contains all the hardware; specifically, the Raspberry Pi board, the Eyepatch board, the memory card / micro SD card, the fan and the image sensor are housed here.
- The camera (image sensor) is positioned beneath a transparent panel, within a recess in the housing, and is directed outwards to capture images.
- The housing features recesses for the USB-C port for power supply (5 V DC) and for connecting the RJ45 cable (Ethernet cable).

3.2 Functional description

- The device is designed to capture images in public areas whilst ensuring data protection. To this end, the image capture process is modified in such a way that no personal data, such as faces, appears in the captured images.
- For data protection reasons, images captured by the device's camera or image sensor must be rendered unrecognisable. Only the information necessary for analysis remains in the image after processing ('image scrambling'). This processing is achieved using the Eyepatch technology.
- The device makes it possible to determine how many people were present within the camera's field of view at any given time over a specific period. The device's 'Eyepatch' module carries out the 'scrambling up' of the captured images at the hardware level.

- The captured image data can be stored on the micro SD card within the device. The data can be transferred via the RJ45 interface to an external device (e.g. a computer) for viewing or analysis. This user manual does not cover the functionality of the analysis software, which is installed on a separate device such as a computer, computer system or server.

3.3 Scope of delivery


The scope of delivery for the device includes the following items:

Pos.	Amount
These operating instructions, including assembly instructions.	1
Device for the hardware-based encryption of sensor data, including a sensor with transfer adhesive tape.	1
PS1-class power supply unit from GlobTek Inc.: Model name: GTM46101-1306-0.8-USB, Manufacturer's part number: WR9QA2500USB52NMR6B The required adapter (USB A to USB C) is included.	1
Airtightly sealed 'alcohol wipes' (small, lint-free wipes soaked in pure alcohol) for cleaning the glass surface and the adhesive surface of the device without leaving any residue.	3

3.4 Views


This section contains various views of the device to aid spatial orientation.

3.4.1 Top view and views from the rear at an angle (viewed from the room towards the screen)

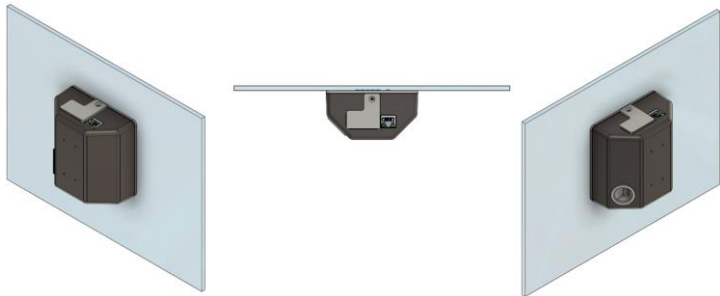

The view in the centre of the image shows the device, including the glass panel, from above.


3.4.2 View from the left, from the right and from the rear

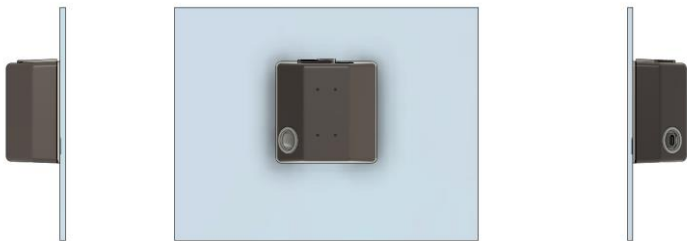

The image in the centre shows the device, including the glass panel, viewed from the rear.

3.4.3 Front view

The following illustration shows the device, including the glass panel, from the front.

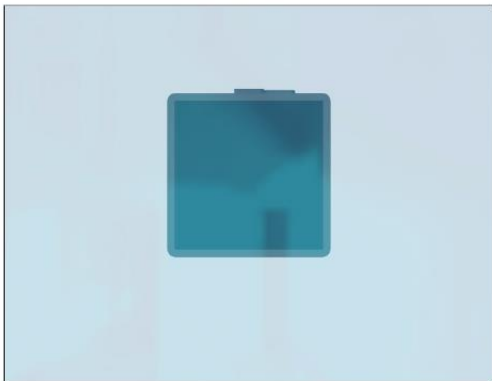

3.5 Types of Use and Operating Modes

3.5.1 Type of Use

The product is intended exclusively for use in the following types of use.

Use for any other purposes is not in accordance with the intended use.

User groups:

- Private users, e.g. non-professionals
- Commercial users

Operating environment:

- In rooms enclosed on all sides

3.5.2 Operating mode

- Automatic mode / Recording mode

3.5.3 Description of the operating mode

- Automatic mode / Recording mode: In this operating mode, the captured images, which have been 'scrambled up' by the hardware, are stored on the micro SD card. The data can also be transferred to an external device (in particular a computer, computer system or server).

3.6 Displays and Control Elements

The device contains no displays or control elements. The captured and 'scrambled images can be stored in the device and transferred via the RJ45 interface to an external device, such as a computer. The data can be displayed and analysed on the external device.

3.7 Usable Interfaces

1. The device's USB-C socket > GlobTek Inc. power supply unit with model number "GTM46101-1306-0.8-USB" (power supply) including USB-A to USB-C adapter.
2. The device's RJ45 socket > Ethernet cable (IT).

The following illustration shows the interfaces of the Eyepatch add-on device.

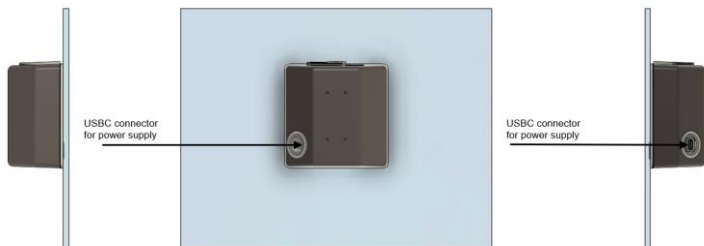


Figure: Side views (left and right in the image) and rear view (centre of the image).



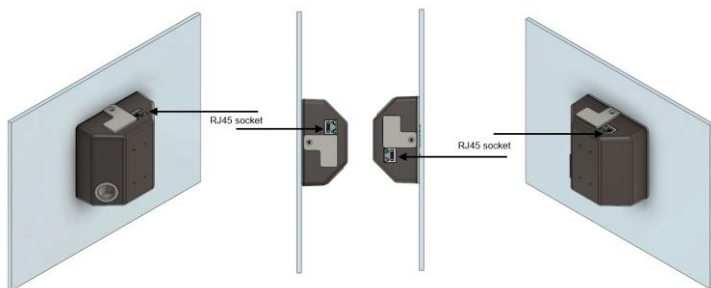


Figure: Side view from the right (on the left of the image) and top view (on the right of the image).

3.8 Type plate

The type plate contains information for identifying the device.

If the type plate is no longer attached to the device, a new one can be created using the information below and affixed to the device. The following illustration shows the type plate in the form of a sticker.

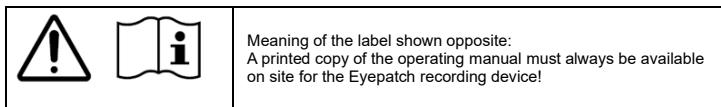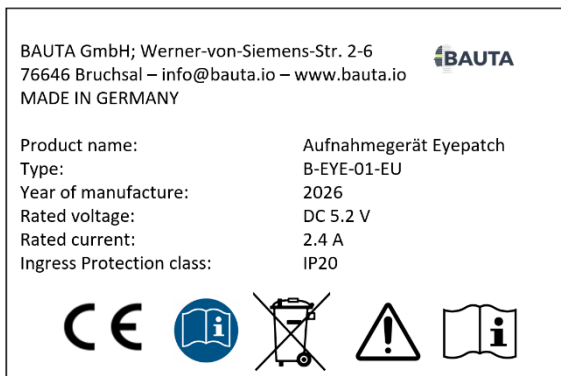

4 Technical Specifications

This section contains technical specifications describing the device.

4.1 Operating Conditions

Time Limits

- Duty cycle: 100%; continuous operation without time limit.

4.2 Dimensions

Dimensions of the Eyepatch attachment:

Length (L) approx. 100 mm, width (W) approx. 100 mm, height (H) approx. 53 mm.

4.3 Mass

Weight of the device, excluding packaging, the mains adaptor and accessories	0,230 kg
Weight of the device, including the mains adaptor, accessories and packaging	Approx. 0.8 kg The device, power supply and accessories are shipped in a cardboard outer box. The device and power supply are additionally wrapped in bubble wrap.

4.4 Energy supply

Electric	The device is powered via USB-C at 5.2 V DC (max. 13 W).
----------	--

4.5 Environmental conditions

4.5.1 Operation

Ambient temperature	0 – 35 °C
Relative humidity	Max. 80%, non-condensing

4.5.2. Transport

Ambient temperature	0 – 50 °C
Relative humidity	Max. 80%, non-condensing

4.5.3 Storage

Ambient temperature	0 – 50 °C
Relative humidity	Max. 80%, non-condensing

5 Safety

This section contains information on the protection of people, pets, farm animals and the environment.

5.1 Intended use

The device is intended exclusively for the following use:

The device is designed to capture images in public areas, whilst taking data protection into account and ensuring that personal data and faces are rendered unrecognisable.

The 'pixelated' images are intended for subsequent analysis to obtain specific information. Only 'pixelated' images may be analysed!

Any other use is not in accordance with the intended purpose and would constitute misuse.

5.2 Areas of Use

The device is intended exclusively for use in the following areas:

- Residential areas, business/commercial premises, small businesses

Use in other areas is not in accordance with the intended purpose.

5.3 Responsibilities and Qualifications of Personnel

Person	Task	Required qualifications
End customer	Installation and commissioning of the unit on request, Operation of the unit	Understanding the installation and operating instructions.
Specialists employed by the manufacturer / specialists commissioned by the manufacturer	Installation and commissioning of the equipment; maintenance of the equipment	A good understanding of the device and its electronics.

5.4 Cyber Security

No measures are required to enhance cyber security.

Even if unauthorised persons were to gain access to the data, the data protection of the individuals recorded would still be safeguarded. In this respect, no further measures are required to improve cyber security.

5.5 Warnings

	Please note: This appliance is not suitable for use in places where children may be present!
--	---

	
	Risk of fire if an unsuitable mains adaptor is used to power the device! The device must only be powered by a Class PS1 mains adaptor or by the mains adaptor designated 'GTM46101-1306-0.8-USB' from the manufacturer GlobTek Inc.!

6 Installation

This section contains information on how to install the unit safely.

6.1 Required external accessories

The accessories listed below are not included in the scope of delivery and must therefore be purchased separately.

- Disposable nitrile gloves and safety goggles.
- Ladder (sturdy, non-slip), ideally a step ladder with a platform.
- Metre stick / folding rule (for measuring the installation height and aligning the device) and a pen.
- Optional: spirit level.

6.2 Safety instructions

- Secure the working area: Ensure that the area around the shop window or window is free of obstacles!
- Use a ladder or step ladder:



To ensure the unit is installed safely, we recommend using a suitable ladder, preferably a step ladder!
Only use a certified and sturdy ladder with the required load-bearing capacity!



Risk of injury if the ladder or step ladder tips over or slips.
When setting up the ladder or step ladder, ensure it is stable and secure on a level surface!



Risk of injury due to slipping whilst climbing the ladder.
Non-slip footwear must be worn when climbing the ladder or step ladder!

Ensure the room is well ventilated: When applying the adhesive and cleaning the glass surface with isopropyl alcohol, ensure the room is well ventilated, as the vapours are harmful to health.



Skin irritation



Cleaning products or adhesives may cause skin or eye irritation.

Wear disposable nitrile gloves and safety goggles to avoid skin or eye contact with the adhesive on the transfer tape or the isopropanol / 'alcohol swab'!

	Additional PPE (required only in workplaces / small businesses with a workshop environment / where machine tools are used): Wear non-slip safety shoes to protect your feet!
--	---

6.3 Installation Procedure

Step 1: Determining a suitable position

Determine the approximate position of the sensor. The device should have an unobstructed view of the target scenario to be analysed.

The device must be mounted on the inside of the windscreen so that the scenario in front of the windscreen can be analysed.

NOTICE	The installation height of the device must be between a minimum of 2.2 metres and a maximum of 3.5 metres above ground level outdoors! The reference point for the installation height is the camera built into the device, which is visible from the outside through the transparent panel. Where possible, the device should be installed as high as possible, but no higher than 3.5 metres.
--	--

Step 2: Cleaning the Sticker Area

 	Wear disposable nitrile gloves and safety goggles, and thoroughly clean the inside of the screen in the area intended for contact with the device using the 'alcohol wipes' supplied or, alternatively, pure isopropanol in conjunction with clean, soft paper towels. Repeat the process if necessary, ensuring that no dirt, residue, fingerprints or dust are visible on the contact surfaces. Once cleaned, the surfaces must not be touched again. Before attaching the device's contact surface to the screen, the alcohol applied during cleaning must have evaporated completely □ allow at least 5 minutes for this to happen!
---	--

Step 3: Align the device and stick it in place



3.1 Preparing the transfer adhesive tape:

On delivery, the transfer adhesive tape – designed for double-sided bonding – is already attached to one side of the device. Carefully peel off the protective film from the other side of the transfer adhesive tape.

Take care not to touch the adhesive!

3.2 Attaching the device to the glass pane:

Align the device so that the RJ45 socket points vertically upwards, ensuring that the sides of the device are vertical or aligned as if in water. A tape measure or folding rule can be used for alignment by measuring the distances from one side of the device to a reference point (e.g. the window frame) at two points on the device at different heights. Alternatively, a spirit level can be used for alignment, which allows the device to be aligned quickly.



Press the unit firmly onto the designated and previously cleaned area using the transfer adhesive tape, and hold it evenly pressed against the pane for approx. 10 seconds!

Avoid applying concentrated pressure to individual parts of the housing!

Avoid subjecting the unit to any load until the adhesive bond has achieved sufficient initial strength after 30 minutes!

7 Commissioning, Operation and Downtime

7.1 Commissioning

The purpose of commissioning the device is to check its functions and characteristics, and to identify and rectify any faults.

Connect the supplied GlobTek Inc. power supply unit, which comes with a separate adapter (USB A to USB C), to the device by plugging it in.

	The power supply unit itself must not pull on the device; instead, it must be positioned in a way to ensure strain relief on the USB-C power cable! Care must be taken on site to ensure that the connected power supply unit remains securely in place at all times and cannot fall!
---	---

- If there is no power socket in the immediate vicinity of the installed device, a certified USB-C extension cable may be used if necessary. Once the power supply is established, the device starts up and the sensor begins collecting image data.

	Any modifications to the device made by the customer will invalidate the warranty!
---	---

7.2 Operation

- During operation, the sensor captures unrecognisable image data. This is stored on the device's memory card.
- The image data can be transferred to an external analysis unit via the RJ45 socket. There, the image data can be analysed using mathematical analysis methods (various software modules) to extract anonymous information.

7.3 Downtime

	If the appliance is not in use, unplug the mains adaptor from the socket!
---	--

8 Maintenance / Servicing / Repairs

Maintenance, servicing and repairs to the equipment must be carried out exclusively by the manufacturer, BAUTA, or by qualified personnel appointed by BAUTA.

In the event of a fault with the equipment, please contact BAUTA's service department.

8.1 Service address

Name und address	BAUTA GmbH Werner-von-Siemens-Str. 2-6 76646 Bruchsal Deutschland
Mail	info@bauta.io

9 Cleaning

This section contains information on how to clean the appliance safely.

Clean the appliance with a clean, soft and dry microfibre cloth. For stubborn dirt, the microfibre cloth may be dampened with warm water (max. approx. 40°C).

	Risk of damage to the device caused by liquids or chemical cleaning agents. Take care to ensure that no liquids get into the device! Do not use chemical cleaning agents; these could damage the surface of the casing!
--	--

10 Disposal

At the end of its service life, the appliance must be disposed of in accordance with statutory requirements.

NOTICE	EU Directive 2012/19/EU regulates the proper collection, treatment and recycling of used electronic equipment.
	The symbol shown here indicates that, in the interests of environmental protection, the appliance must be disposed of at the end of its service life in accordance with statutory regulations and separately from household or commercial waste! The old appliance can be disposed of via the relevant official collection points, such as the recycling centre, in your region. Further details regarding collection can be obtained from your local authority. Separate collection and recycling help to conserve natural resources and ensure that all regulations regarding the protection of health and the environment are observed when the appliance is recycled. Alternatively, the appliance, including the mains power supply and adapter, can also be returned to the manufacturer for disposal.

11 EU Declaration of Conformity (CE)

The manufacturer

BAUTA GmbH,
Werner-von-Siemens-Straße 2-6,
76646 Bruchsal

hereby declares that the following product

Product name: Aufnahmegerät Eyepatch
Type designation: B-EYE-01-EU
Year of manufacture: 2026

Complies with all relevant provisions of the applicable legislation (as set out below) – including any amendments in force at the time of this declaration. The manufacturer bears sole responsibility for issuing this declaration of conformity. This declaration relates solely to the equipment in the condition in which it was placed on the market; parts fitted and/or modifications carried out subsequently by the end user are not taken into account.

The following legislation was applied:

EMV-Richtlinie 2014/30/EU
RoHS-Richtlinie 2011/65/EU
Produktsicherheitsverordnung (EU) 2023/988

The notified body Nemko GmbH was commissioned to carry out the full EMC test on the device.

Address and details of Nemko:

Nemko GmbH
Reetzstraße 58
D-76327 Pfinztal
Deutsche Akkreditierungsstelle: D-PL-22131-01-01 / D-PL-22131-01-04

Product or product family standards applied:

EN 55032:2015+AC:2016+A11:2020+A1:2020 (Grenzwertklasse B):

Elektromagnetische Verträglichkeit von Multimediageräten und Einrichtungen - Anforderungen an die Störaussendung (CISPR 32:2015 + COR1:2016 + A1:2019).

EN 55035:2017+A11:2020 (Störfestigkeit):

Elektromagnetische Verträglichkeit von Multimediageräten - Anforderungen zur Störfestigkeit (CISPR 35:2016, modifiziert).

EN IEC 62368-1:2024+A11:2024:

Einrichtungen für Audio/Video-, Informations- und Kommunikationstechnik - Teil 1:
Sicherheitsanforderungen.

Place: Bruchsal

Date: 22.07.2026


A handwritten signature in blue ink, appearing to read 'D. Nikola', is written over a horizontal line.

Signature von Daniel Nikola, CEO of BAUTA GmbH

BAUTA GmbH - Werner-von-Siemens-Str. 2-6 - D-76646 Bruchsal

M info@bauta.io - **W** www.bauta.io

© 2026 BAUTA GmbH, Germany